

# UWELL

Manufactured by SHENZHEN UWELL TECHNOLOGY CO., LTD.

[www.myuwell.com](http://www.myuwell.com)

©2021 By SHENZHEN UWELL TECHNOLOGY CO., LTD., All Rights Reserved.  
Designed by UWELL Made in china



Uwelltech



Uwelltech



Uwelltech



Uwelltech



Uwell



CRC Version

WHIRL T1 Pod Mod  
User Manual

## Specification

- Material: PCTG, Aluminum Alloy
- Size: 104.3 mm × 25.7 mm × 25.5 mm
- Net Weight: 53 g
- E-Liquid Capacity: 3 ml
- Output Wattage: 14W / 15W / 16 W
- Battery Capacity: 1300 mAh
- Pod cartridge specifications:  
FeCrAl UN2 Meshed-H 0.75Ω WHIRL T1 Refillable Pod  
(CRC Version)


## The Packaging Includes

- 1 × WHIRL T1 Pod Mod (CRC Version)
- 1 × UN2 Meshed-H 0.75Ω WHIRL T1 Refillable Pod (CRC Version) (Built-in)
- 1× User's manual

## Features

1. Three output mode, switch with ease.
2. Draw activation only, free from button false triggering.
3. The refillable pod cartridge adopts a proprietary child safety lock design, a more reliable device is safer for the minor.
4. Airflow can be adjusted to different personal needs.
5. The Uwell Pro-FOCS technology ensures an authentic flavour of the e-juice.
6. The chip-set inside functions a multiple circuit protection, providing a stable, safe and reliable output.
7. Triangular shape provides a unique grip.

## Illustration

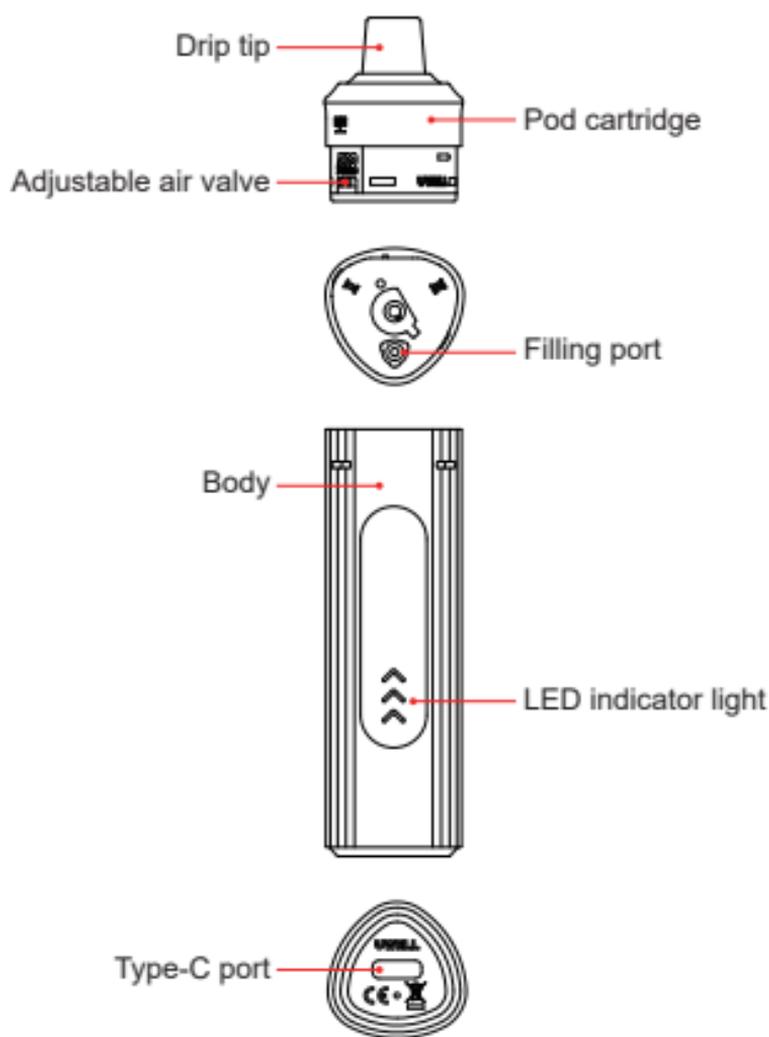


### **Please read the following information before use:**

1. Pull out the pod cartridge.
2. Instill through e-juice inlet and allow the coil to soak for 10 minutes after the first filling.

## Instructions

### 1. How to fill the pod

- Pull out the pod cartridge from the body.
- To instill, push e-juice inlet to start filling.
- Install the pod cartridge into the body.

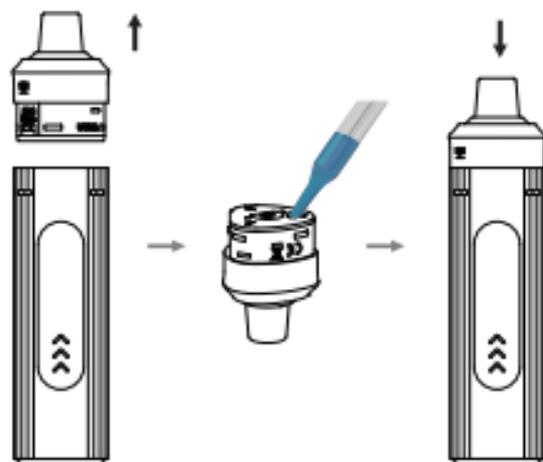

### Attention

- Reach inside the container with e-juice bottle nozzle when filling.
- To avoid dry-burning, please wait for 10 minutes after the first e-juice top-up.
- Please refill immediately when e-juice level reaches the refill mark.

### 2. Vaping

The device will start working with drawing, and the LED indicators will be on along while the device is working. The maximum working time is 8 seconds with each draw as a protection. In the case of exceeding 8 seconds of continuous drawing, the device will cease working, while the LED indicators will flash in green 5 times as a prompt.

### 3. Instructions for replacement of pod cartridge

Take out the old pod cartridge from the body and insert the new one.


#### Attention

Allow the coil to soak for 10 minutes after the filling before use.

### 4. Tri-power feature

To experience different flavoring, simply do the following:

- Align the liquid inlet with the logo plate then insert the pod, one green arrow will flash 3 times to indicate that the device will be running in minimum power mode.
- Align the "II" Mark and insert the pod, two green arrows will flash 3 times to indicate that the device will be running in medium power mode.
- Align the "III" Mark and insert the pod, three green arrows will flash 3 times to indicate that the device will be running in maximum power mode.

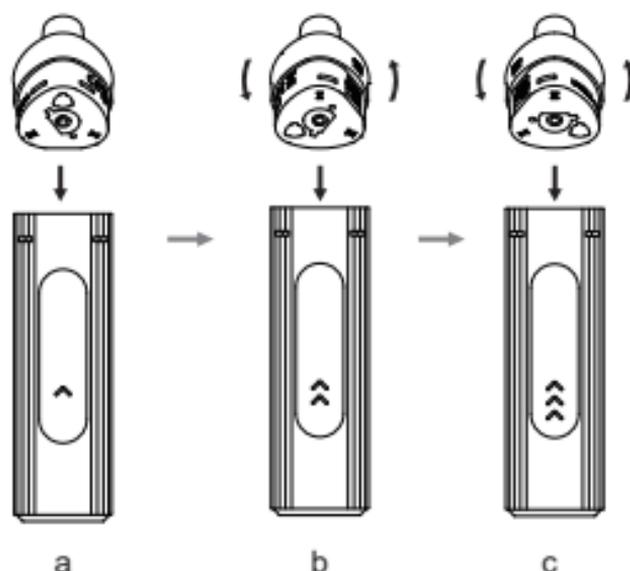

## **Attention**

- a. In case of insufficient power for high power mode, device can still be run in medium power mode.
- b. In case of insufficient power for medium power mode, device can still be run in low power mode.

## **5. Battery indication function**

The LED will flash green to signal the remaining battery capacity is over 60%; blue to signal 30%-60%; red to signal below 30%; 10 times of red flashes upon battery depletion.

## **6. Short circuit protection**

In the case of short-circuit, the indicators will flash red 3 times and stop working.

## **7. Low voltage protection**

The indicators will flash red 10 times and stop working if the battery is depleted.

## **8. Timeout protection**

The maximum working time is 8 seconds with each draw as a protection. In the case of exceeding 8 seconds of continuous drawing, the device will cease working, while the LED indicators will flash in green 5 times as a prompt.

## **9. Open circuit prompt**

When the pod cartridge is not properly connected or not connected, the LED indicators will flash blue 3 times to signal open circuit.

## **10. Charging**

While charging, the indicators will flash to signal power level: green to signal battery level is charged over 60%; blue to signal 30%-60%; red to signal below 30%; indicators will stay on upon charge completion.

## **Attention**

1. Please charge with certified high-quality adaptor from a reputable company and a Type-C cable with the charging current of 5V/2A.
2. The device and adaptor may warm up when charging, keep away from flammable and explosive goods.
3. Please use a dry and soft cloth to clean the device. Keep away from water or any liquids.
4. Please remove the pod cartridge and store it separately when you are on a plane to avoid leakage due to pressure changes.
5. Please do not put the device in your pocket with other hard objects to avoid damages.
6. Please charge the device at least once a month.
7. Don't disassemble the device.
8. Avoid high temperature, low temperature and humidity during use or storage to avoid damage to the equipment.
9. The product parameters or pictures in this manual are for illustration purpose only, please refer to the actual product.

## **Safety Instruction**

Please read the following safety instructions carefully before using the product.

1. This product is only available to people who have reached the legal age of smoking. It is strictly forbidden for young children, pregnant women and women during breastfeeding or for patients with heart disease, high blood pressure, diabetes, depression and asthma.
2. Please put the product out of reach of children and pets to avoid injury.

3. When using this product, please keep away from inflammable and explosive materials to avoid injury.
4. The company does not assume any responsibility for any equipment damage or personal injury caused by user misuse.

## **Warranty Details**

Please keep the anti-counterfeit code and proof of purchase after purchasing the product. The warranty period is 180 days from the date of purchase. Our company provides warranty service (Device and atomizer only, exclude coil head and pod cartridge).

Please note that any of the following conditions are not covered by the warranty:

1. Exceeding the warranty period.
2. Damage caused by the use, maintenance, and storage that is not in accordance with the requirements as instructed.
3. Damage caused by unauthorized repair.
4. Damage caused by the usage of non-UWELL components.
5. Damage caused by force majeure.

## **Verification**

1. Visit the UWELL official website [www.myuwell.com](http://www.myuwell.com) through a smartphone or PC.
2. Please enter the 16 digits authentic code, and the result will be displayed in a few seconds.
3. Please feel free to contact UWELL via e-mail, phone or website for more help.

## **Customer Service**

We pride ourselves on manufacturing quality products and providing excellent customer service. For any issues, please contact us at [service@myuwell.com](mailto:service@myuwell.com).

- \* UWELL reserves the right of final interpretation in the user manual.
  
- \* It is hereby stated that the markable area on the product is not enough to mark the CE and WEEE as the standard dimensions.